

VideoMate Vista U100
USB 2.0 DVB-T Stick
Start Up Guide

Copyright © 2001-2008. Compro Technology, Inc. No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Compro Technology, Inc.

Compro, VideoMate, Poladyne, Play with Power, and the Compro logo are trademarks of Compro Technology, Inc. Other names and marks are trademarks of their respective owners.

Compro makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability, quality, or fitness for any particular purpose. The information in this document is subject to change without notice. COMPRO reserves the right to make revisions to this publication without obligation to notify any person or entity of any such changes.

Compro Technology, Inc.

Tel. +886 2 2918 0169, Fax +886 2 2915 2389
4/F, No.12, Alley 6, Lane 45, Pao Shin Road
Hsintien City, Taipei, Taiwan.
www.comprousa.com

Table of Contents

About This Guide	4
VideoMate U100 Contents	5
Installation	6
Windows Media Center Remote for Vista U100	7
ComproDTV Vista Gadget Tool for Vista.....	9
HID (Human Interface Device) for Compro Remote	12
Open and close the ComproDTV 4 display panel.....	13
ComproDTV 4	14
Troubleshooting	21

About This Guide

VideoMate Vista U100 lets you watch and record digital terrestrial TV broadcast on your computer or laptop. It can efficiently capture digital terrestrial TV broadcast programs from your area. VideoMate U100 features a TV tuner for digital TV broadcast, Digital Video Recording (DVR) functions, scheduled recording at anytime, crystal video quality, and intelligent TV viewing.

MINIMUM SYSTEM REQUIREMENTS

Your PC must meet or exceed the following system requirements to watch TV on your PC.

- PIII 1.7 GHz CPU for TV viewing
- 512 MB RAM
- Available USB 2.0 ports (USB 2.0 only)
- Sound card or on-board sound chip
- Graphics Card or on-board graphics supports DirectX 9.0
- CD-ROM for software installation.
- Windows XP SP2 or above installed.
- 50 MB free disk space for basic software installation.

RECOMMENDED SYSTEM REQUIREMENTS

To use all the features of VideoMate U100, your PC should meet the following requirements.

- 2.6 GHz CPU with SSE 2 support for DVD recording and timeshifting
- 3.0 GHz CPU with SSE 2 support for HDTV/TS viewing/recording and PIP
- 1GB RAM
- Sound card or on-board sound chip
- Available USB 2.0 ports
- CD-ROM for software installation
- Graphics Card or on-board graphics supports DirectX 9.0
- Windows Vista x86/x64
- Update the latest drivers of VGA, motherboard, and soundcard from vendors.
- 50 MB free space for software installation

 
VideoMate U100 Contents



VideoMate U100
DVB-T stick



MCE Remote
with battery

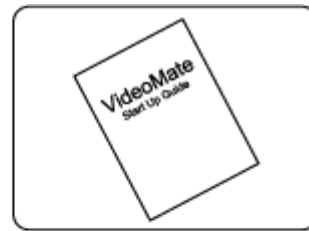

Start Up Guide



Software CD



USB 2.0 cable



Digital terrestrial
TV antenna

Note

In order to receive digital terrestrial TV broadcast, the antenna is crucial. Digital terrestrial TV broadcast uses about the same wave as analog TV. It's recommended to have a fishbone-like antenna on the roof for receiving. More detail is on the troubleshooting chapter in this manual.

VideoMate U100 has to operate on USB 2.0 interface. Please check your computer system to see if meets USB 2.0 requirement.

Installation

Start the computer. Make sure *VideoMate U100* is connected to your computer and insert the installation CD into your CD drive.

Step 1. Windows will detect a new device and start the Add/Remove Hardware Wizard. Please press **Cancel** and go to the next step.

 
Step 2. Insert the installation CD into your CD drive. If you have Autorun enabled, the installer will start automatically. (If Autorun is disabled, double-click on "setup.exe" on the installation CD.) You can choose **Complete** to install all necessary software (VideoMate U100 drivers, ComproDTV4, or choose **Custom** to select item by item. Compro recommends you choose **Complete**.

Step 3. After each program is successfully installed, press **Finish** to proceed.

Step 4. When installation completes, press **Finish** to restart computer.


Step 5. Connect TV signal.

Step 6. Open ComproDTV to enjoy the show.

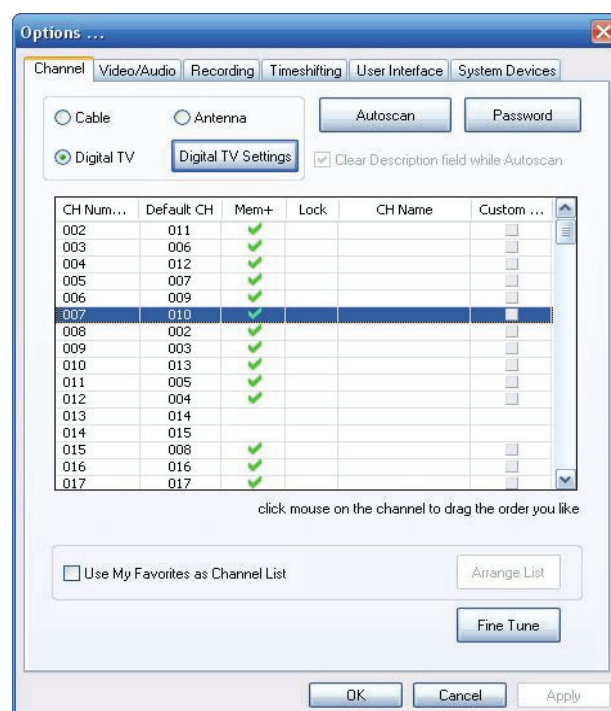

Windows Media Center Remote for Vista U100

 Compro VideoMate Vista U100 bundles the easy-to-use Microsoft certified remote control to controls the Media Center and also ComproDTV, ComproFM software. Some keys are special designed for Windows Vista Premium/Ultimate, it may not be used in Windows XP system.

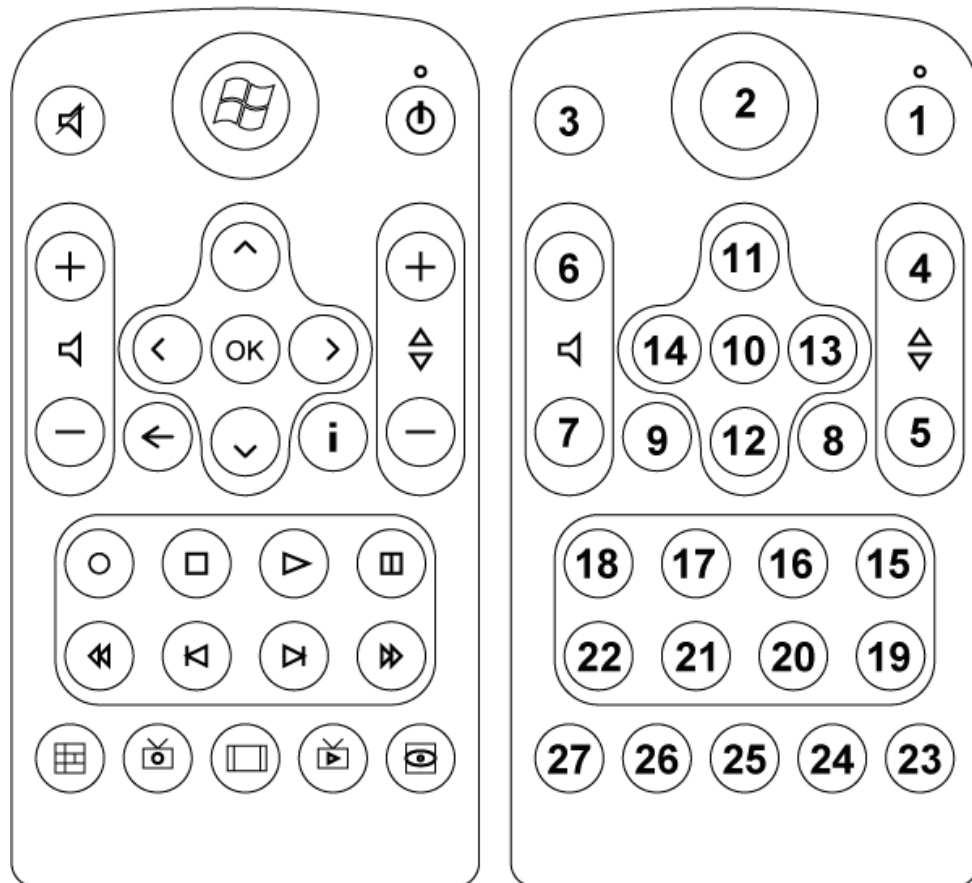

No.	Windows Media Center (MCE)	ComproDTV 4
1	Into sleep mode	Into sleep mode
2	Media Center	Media Center
3	Mute	Mute
4	Channel Up	Channel Up/Angle
5	Channel Down	Channel Down/Subtitle
6	Volume Up	Volume Up
7	Volume Down	Volume Down
8	More	Zoom
9	Back	Guide/Menu
10	OK	OK
11	Up	Up, Mono/SAP/Stereo
12	Down	Down/snapshot
13	Right	Right/forward
14	Left	Left/backward
15	Play/Pause	Play/Pause, Timeshift
16	Play/Pause	Play/Pause, Timeshift
17	Stop/Live	Stop/Live
18	Record	Record
19	Fast Forward	Fast Forward
20	Skip Forward	Aspect Ratio
21	Skip Rewind	Last Channel
22	Rewind	Rewind
23	DVD Menu (MCE)	No function
24	Live TV (MCE)	Live TV (MCE)
25	Zoom (MCE)	ComproDTV
26	Recorded TV (MCE)	Recorded TV (MCE)
27	MCE Guide	MCE Guide

ComproDTV Vista Gadget Tool for Vista

 
The Compro gadget tool is designed to provide the more convenient TV experience in Windows Vista. It will be installed from the Compro installation CD, and you can delete and add it from gadget setup.

Note


1. Vista Gadget is meant for Vista 32 bit operation system only.
2. Vista Gadget Tool needs the channel table from ComproDTV 4. Please autoscan all the available digital TV channels in ComproDTV 4. Then you can use the Vista Gadget Tool.
3. If there is no picture when you click the live TV button, please right-click the mouse button and select the video source you want.

UI Control


DTV Gadget has three modes including **Live TV mode**, **display playlist**, and **display scheduled list**.

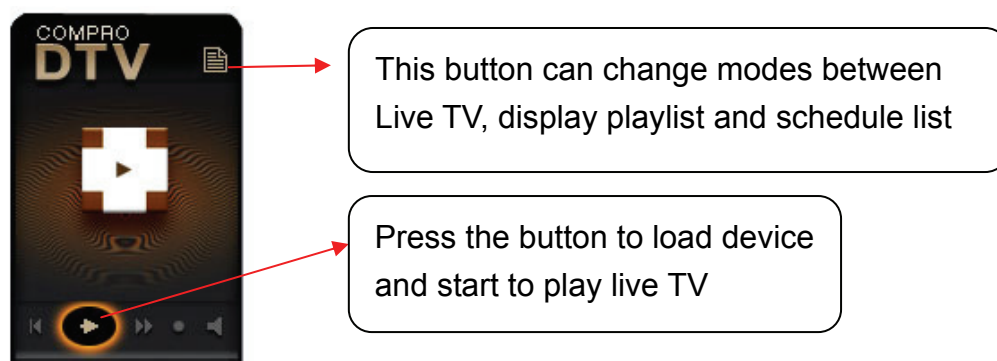

The buttons from left to right sides are:

	Channel down in live TV mode
	Start/Stop Live TV, Play/pause from playlist
	Channel Up in live TV mode
	Start/stop record live TV
	Mute

 Playlist mode: It just displays first eight files in the list you recorded, if there are more than eight files in folder, the ninth file or rest of files will not be display. The figure in below shows the playlist style:

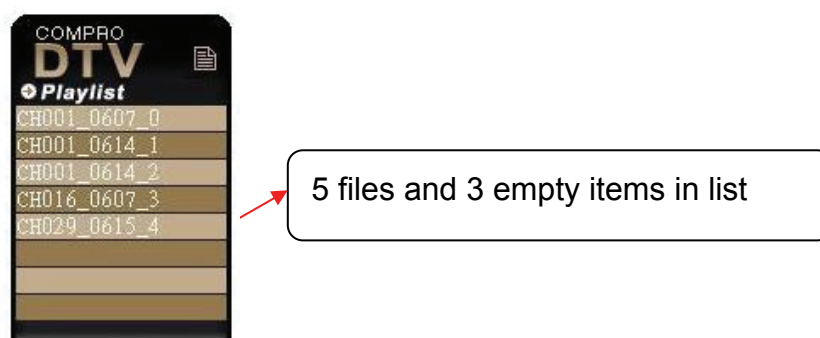


If clicking any files, the gadget will change to play mode from playlist mode, then playing the file you clicked.

Scheduler list mode: This mode will display the top 5 of your current scheduled list, you can click any of the scheduled item and check the detail information of it.

The last mode is schedule view which has two different parts. First, there is a table that has five rows; it means that schedule view will allow the first five schedules in the list. Second, if clicking the item, it will change to another part, which show in detail about the schedule you clicked. Clicking again will go back to first part. The process showed as below:

Dock and Undock Gadget Window:

 Only docked gadget has three modes, the undocked gadget only support live TV/playback video mode, and its size is bigger than docked one. You can direct drag the gadget window to the other place out the sidebar and shows the bigger undock window to watch TV or playback recorded video files.

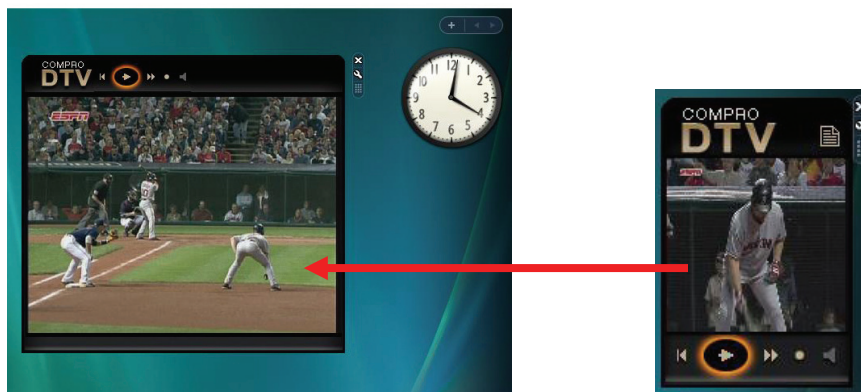


Directly drag gadget windows out the sidebar and shows the bigger window

Because undocked gadget lacks playlist, if you wants to play a file in undocked mode, you can drop a file into the window of gadget to play a file .(in docked mode, you can also play a file by dropping a file into gadget) The control of button in undocked mode is the same as docked mode.

Pop Menu

 
Click the right mouse button on the gadget window; it will open the pop menu for selection. You can return to last channel, autoscan available channels, select channel to watch from channel list, select video source, adjust audio volume, or snapshot TV screen.

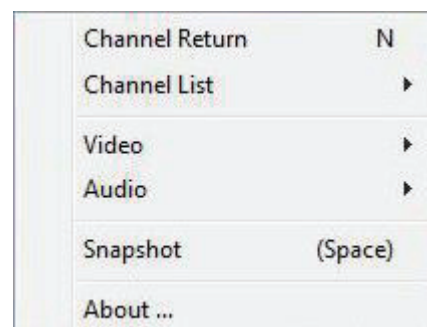

Gadget Settings

Settings of gadget have four parts included:

 
- Capture device : to select capture devices.
(when running gadget first time or having more than one device, this item is needed)
- Quality setting : to select recording quality
Normal, Better, Best Quality
- Record folder: a directory to place recorded files.
- Snapshot folder: a directory to place picture.

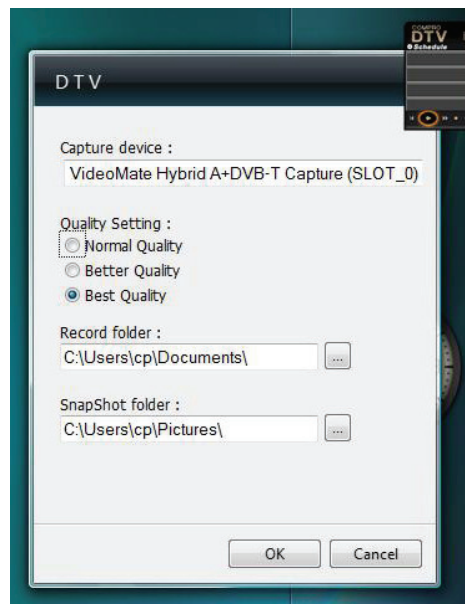

HID (Human Interface Device) for Compro Remote


After you install the software, you can see the remote logo show in your system bar.

 You can choose the “Option” to enter the setup window.

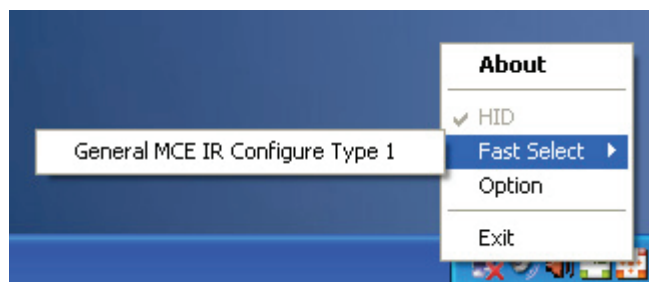

Setup:

 
Step 1: Choose the type of your remote control. (There are many type of remote from Compro, please select the remote picture as you have).

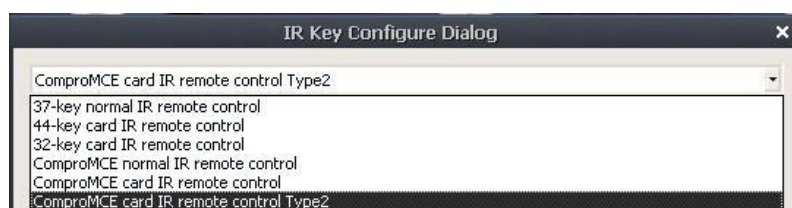

Step 2: Choose one IR function you want to change.



 Step3: Set the IR dialog you want and press OK button.

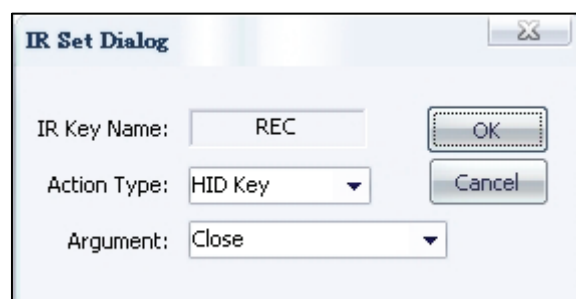

Step4: Repeat setp1 to 3 to run all the changes.

You can also set a whole new program of your remote control in some particular software or window.

Press “Add” button and enter the name you want. Repeat the step 1 to 4.



 
Note

If you have any MCE system in your PC, such as Windows MCE, Vista Premium, Vista Ultimate, this function can replace the windows remote control. HID can also combine the Compro software control in the MCE interface to make you more convenient.

Open and close the ComproDTV 4 display panel

You can open and close the ComproDTV 4 display window by click the down arrow on the right of ComproDTV panel.


Open and close display panel

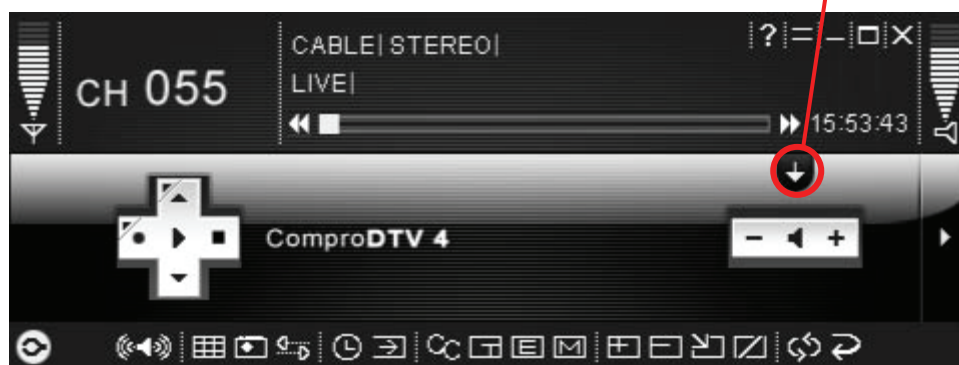


ComproDTV 4

Control Panel

  The ComproDTV 4.2 control panel resembles the controls on a VCR. Please note that not all options are available at all times, and may be grayed out or inaccessible depending on your hardware setup and TV services available. The following figure gives you the function of the button with (Hot key)

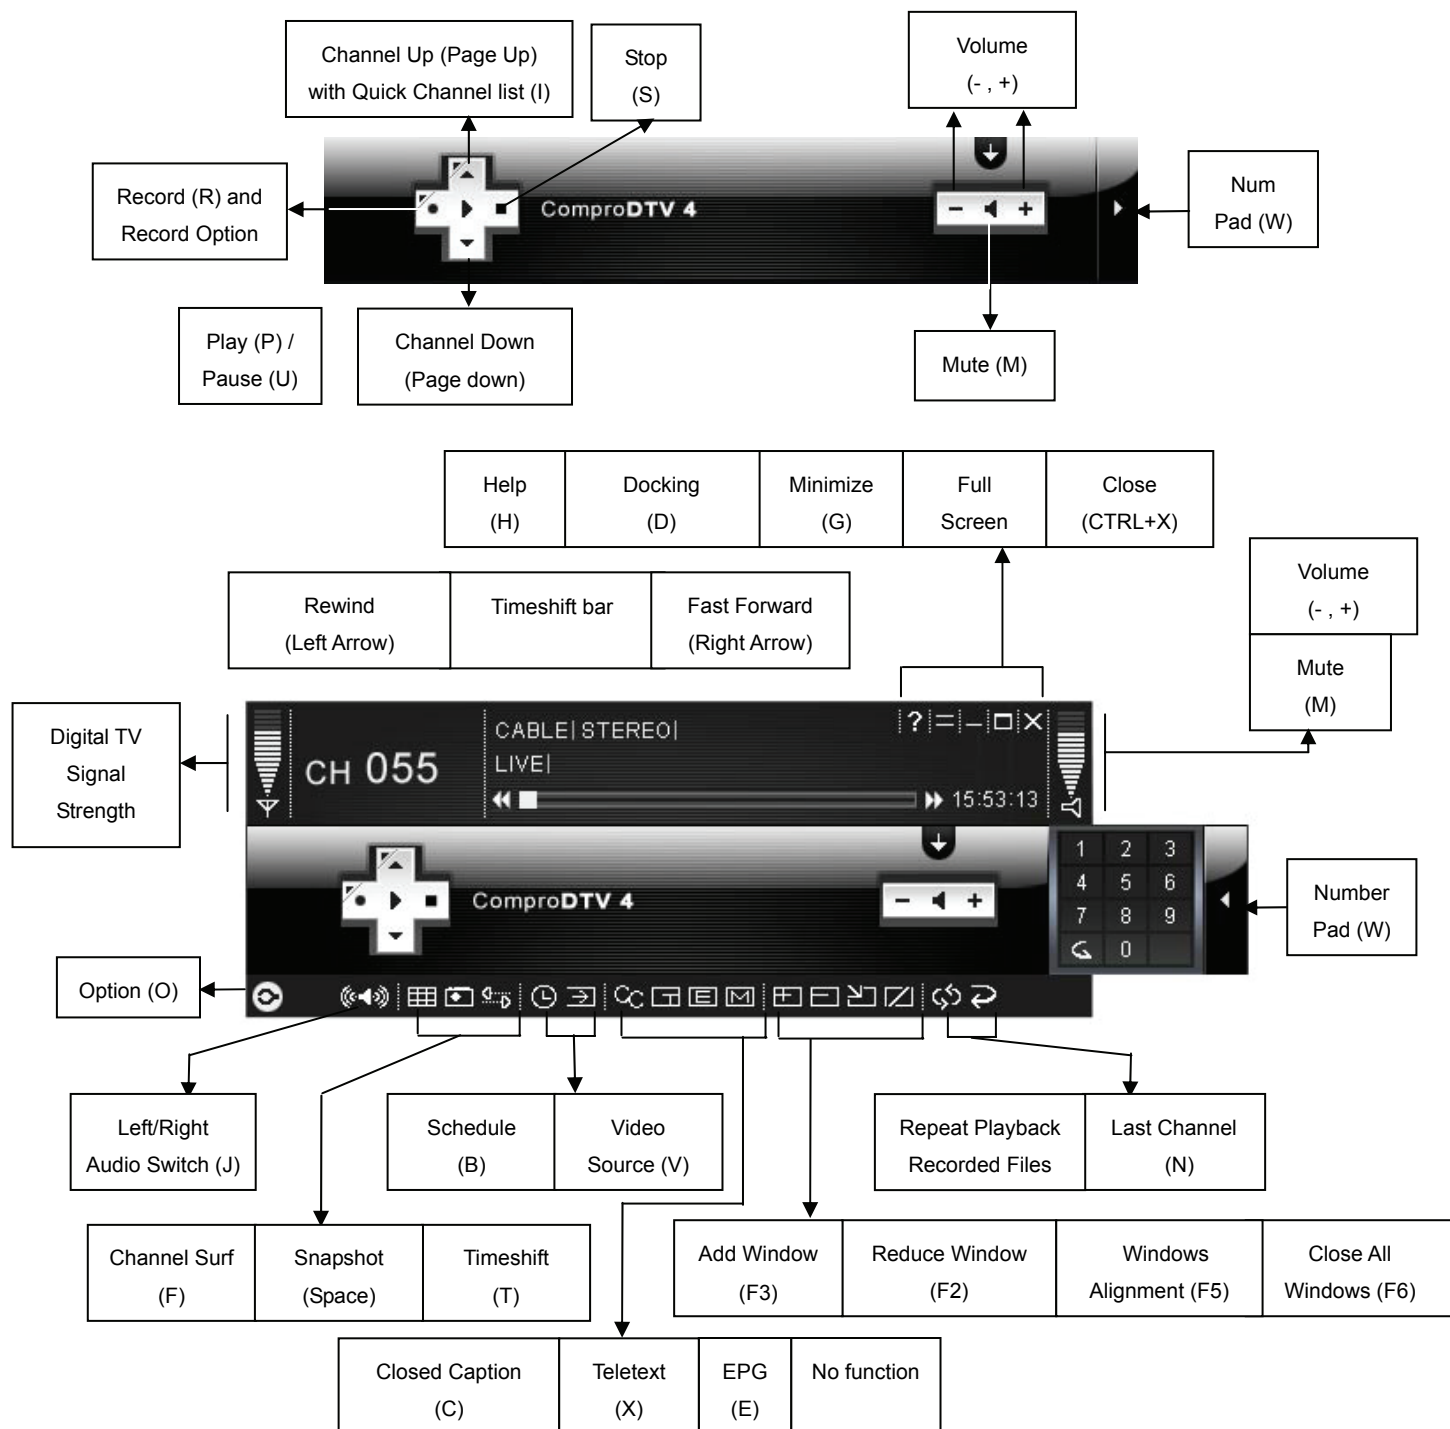

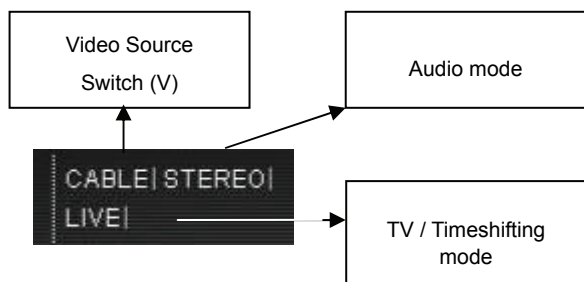


HotKey	Description
A	Enable/Disable Always-on-Top function for TV window.(Oregon circle on the upper-right corner of the TV window)
L	Sleep function
F7	Video Desktop
F8	Open snapshot dialog box

Note: Language select is only available while the program supports it.

Start ComproDTV 4 and watch TV

After installation, just press the yellow button of the last line on the remote or double click the ComproDTV 4 icon on the desktop, you will be able to watch TV. Same as operating a normal TV set. Watch TV programs on your PC, in full-screen mode or in a window. Channel up and down. Close ComproDTV 4 and even shutdown the computer with the full function remote control keypad.

Options


Press the Options button  to open the Options dialog box. You can change detail settings of ComproDTV 4 here.

TV Settings

This option gives you the way to manually set the method of scanning TV programs. Select your choice here or use default channel table to do the scanning.

Autoscan

The first time you start ComproDTV 4, Autoscan will automatically scan for available TV channels for TV signals. Please select your TV source from analog cable/antenna or from digital antenna. You can rescan the channels at any time by pressing the **Autoscan** button.

When **Autoscan** is finished, detected channels are automatically enabled and marked with the green check mark . Channels, where a valid signal could not be detected, are disabled and marked with a blank. However, you

can interrupt the scanning process by pressing the **Stop** button.

After you are finished scanning for available channels, you may select **OK** to return to the display window, or customize the channel list according to your preferences, as described below.

 
Channel Naming

You can customize the channel names by double-click on the **Description** field of the channel you wish to rename.

You can do more changes on the channel's property by right-click the mouse on the **Description** field of the channel you wish to edit.

 
Custom Settings for each channel

You can customize each channel properties by click the icon in "Custom Settings" filed and edit it.

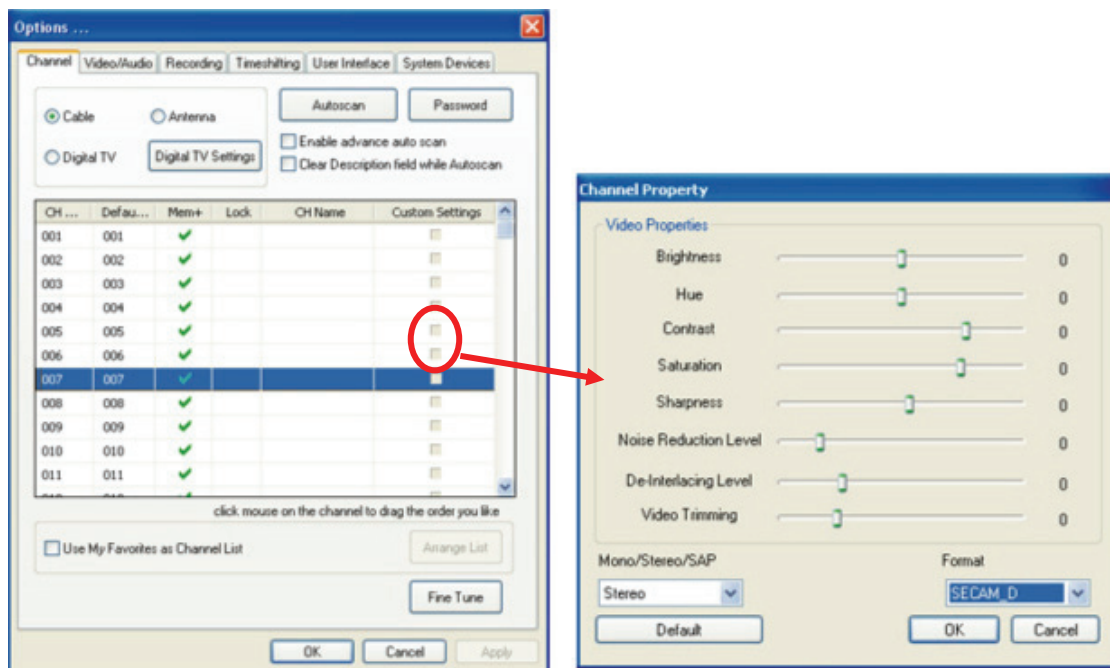


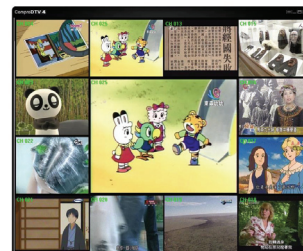 
Using my favorite channel list

You can click to select using my favorite channel list from option window. And exit the list by yourselves to makes channel switch more convenient.

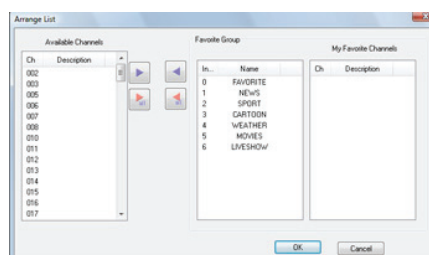

 
Channel Surfing

While watching TV, the channel surfing  feature displays a 4x4 grid of channel images to give you an overview of available programming. Double click the channel screen can direct jump to the channel you want.




PIP/POP mode


Usually, digital TV station broadcasts multiple programs on one frequency. Therefore, ComproDTV 4 in Vista U100 TV stick supports up to 1 main DVB-T channel windows, 3 sub channel windows, and playback recorded video file at the same time if available.

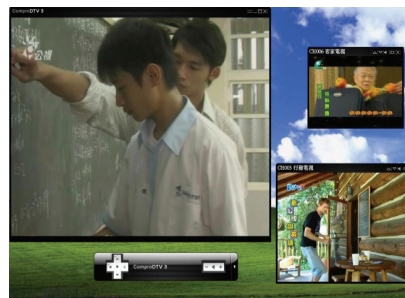

You can press the **Add/Reduce Window** 

button to open a slave window for that. Please see the following picture.

Main window has all features while slave window has limited functions only. Double-click on the slave window can switch the TV program to the main window. **Alignment Window**  button will put slave window(s) into main window which is convenient for you to watch multiple programs on full screen mode.

The buttons on the upper-left corner slave window  are Channel Up, Channel Down, Mute, Windows Alignment, and Close respectively. Slave window can be resized by mouse dragging lower-left corner to any ratio.


Advanced Multiple Video Display Mode

ComproDTV 4 also supports 2 or above Compro products connect and watch it at the same time. If you have more than one Compro analog or digital TV cards and USB TV box, you can use it to watch the live TV from different devices.

When Starting PIP mode, there will be two option for you to choose;

1. "Digital Sub Window" → If any one of connected products have digital TV feature.
2. "VideoMate xxx (another installed product name) Video Capture" → Other analog or digital TV cards/USB box.

(Pictures below show the H900 for example of the second device)

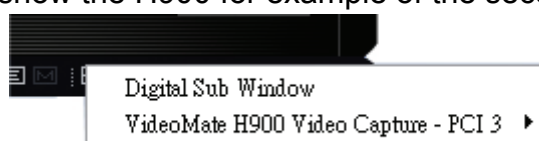 

Choosing the “Digital Sub Window” will open a new window to view the digital sub channels in the same frequency of the main window. Choosing the “VideoMate xxx Video Capture” will open a new window to view digital or analog channel with the second tuner in other products, which you are able to tune to any channel you prefer. However, you are only allowed to have one channel from the second tuner. Therefore, you can view total of five channels with main window’s channel and three sub channels of the main window and another channel of the second tuner. Furthermore, you can also have another window to playback recorded file which now allows you to watch total of 6 windows at the same time.

Note

Running additional windows consumes more CPU usage. If CPU usage reaches 100%, then video lag will occur. Please reduce the number of windows.

 
When main window changes the channel to another frequency, slave window(s) will move to available programs of another frequency. The slave window will show black if there is no additional program on this frequency.

Slave window has no full screen mode. Please double-click on slave window to switch program with main window in order to do so.

It is available to hear audio on multiple programs at the same time. You can mute or un-mute the sound of slave window(s) at any time. However, main window audio can’t be muted separately from slave window(s).

Video Desktop

While watching TV, you may right-click on the TV screen and select video on desktop or press the hotkey (F7) to activate Video Desktop mode. This mode makes the video source as your desktop screen. It is similar with full screen but the desktop icons and taskbar will remain on top. The following picture shows the TV on the desktop.

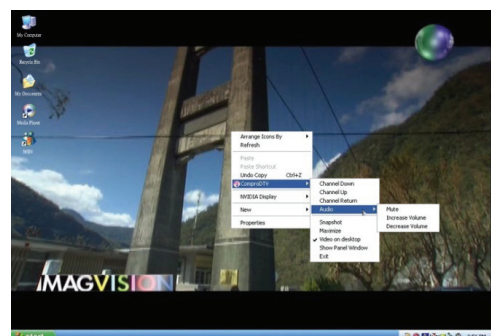

For the Video Desktop feature, you need to enable the “Use Overlay Surface” feature in the setup dialog box of Option→Video/Audio.

Right-Click Mouse Menu


If using mouse to right-click on the TV screen, you can see a menu pop up. There are many useful options for your convenience.


Zooming image

If you would like to see more details on a certain part of a video image, you can press the mouse right button to drag a zone of the screen. You will see the zoomed image.

Also you can press the mouse right button and move on the screen to shift the zoomed area of the image. Just click the mouse left button to resume normal mode.

Still Image Capture


Click on the capture icon  on the control panel or hit the "Space Bar" of the keyboard shortcut to capture an image of the display window. You can see the screen capture dialog as below. You can setup to save it as jpg or bmp format in the ComproDTV option → interface. And also setup the picture compress quality in jpg file.

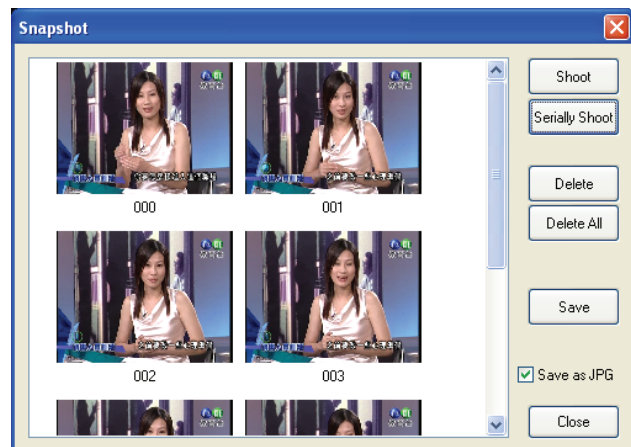 



Recording

ComproDTV 4 supports MPEG-2 and Transport Stream formats recording in digital TV.

To instantly start recording:

Press the **Record** button . ComproDTV 4 starts recording the video source currently showing in the display window. It will save it to a file on your disk. **If you already start recording, you still can click the record button to setup 30, 60, 90, and 120 minutes recording immediately. Thus, you can go out without worry about the record still ongoing.**

Press the Stop button  to stop recording. ComproDTV 4 will save it automatically and show the file name on the screen.

You can also use the schedule recording by press **Schedule** button  on control panel of ComproDTV 4.

Timeshifting

Timeshifting temporarily saves the video to your hard disk for a specified period of time so that you can pause, replay, or skip commercials during live TV, without interrupting an ongoing recording session.

Press the **Timeshifting**  button and the Time Monitoring bar will appear.



You may also press the **Advance** (for commercial skip) and **Replay** (for instant replay) buttons on the control panel or remote control to navigate through the program. When you return to your seat, you can resume viewing the program from the point when you left.

Troubleshooting

Troubleshooting steps

If you have problem installing or running VideoMate Vista U100, please check the following by step:

OS issue: VideoMate Vista U100 has to work on USB 2.0 interface. Note only Windows XP SP2 or Vista support USB 2.0. You are welcome to www.WindowsUpdate.com website for the Service Pack update of Microsoft.

USB 2.0 issue: you need to check your computer has USB 2.0 or not. Usually you will see "USB 2.0 Root Hub" device in the "Sound, video and game controllers" section of Windows Device Manager.

Driver issue: You should see " VideoMate Vista U100 " drivers, in the "Sound, video and game controllers" section of Windows Device Manager. If these drivers are not there, reinstalling the VideoMate Vista U100 drivers can help.

Power Issue: VideoMate Vista U100 takes power from the USB port. **Note:** PCMCIA and USB hub won't provide enough power so that you have to use the kind of PCMCIA and USB hub which has power adapter included.

Sometimes plugging in another USB port may help. Some motherboards and notebook's USB ports do not meet the USB standard providing the standard 5V 500mA power. In these cases, VideoMate Vista U100 will not have enough power to work. Please contact computer vendor for the issue.

Video OK / No Audio:

Make sure the audio device is "Your sound card device" in the System Device in Settings of ComproDTV. Also, you have to select the audio source to be "WAVE" in the System Device in Settings of ComproDTV.

Check that the sound is not muted or volume too low in the Windows Volume Control dialog. (Double-click on the speaker icon in the system tray.)

Check that the sound is not muted or volume too low in the Windows Volume Control dialog. (Double-click on the speaker icon in the system tray.)

Sometimes updating the sound card driver from vendor or VideoMate Vista U100's software from www.comprousa.com may help as well.

No sound on the recorded file: Please see above “Video OK / No Audio.” on the number 5.

Playback lags: VideoMate Vista U100 needs CPU resources to do the encoding. Therefore, the lags come when CPU fails to encode in real time. Usually, VCD quality needs about 1.7 GHz CPU for recording while DVD quality needs about 2.4G CPU for recording. Press Ctrl + Alt + Del to check your CPU usage. If it reaches 100%, then the lag is inevitable.

TV is not clear: Sometimes the signal could be reduced by the branching. Please make sure the cable signal is good. Try to move the computer to a TV set and connect the cable which is being used for the TV set. Also directly connecting the cable before the splitter may help. This problem could also come from static. Once you connect the cable to our TV card, the static interferes with the system. It's possible to correct this problem by connecting a wire from the grounding of the cable to ground. Also make sure computer grounding is good.

Other issue: Please go to our website for the latest software update. Many problems may be fixed on the newer software version. You are welcome to visit our website at <http://www.comprousa.com/support>

No digital broadcast signal



In order to receive digital terrestrial TV broadcasts, an antenna is crucial. Digital terrestrial TV broadcast uses about the same wave frequencies as analog TV (UHF). It's recommended to have a fishbone-like antenna (see figure) on the roof for reception.

Make sure you position the antenna in the direction of the TV broadcast base. Adjust the position for the best reception.


Digital terrestrial TV's determined by government policy. The broadcast bases will be increased in order to cover the entire country. Please check the related government website for more information about the strength of digital terrestrial TV broadcast in your area.

You can check how good the signal is in your location by performing a simple test. Please plug in the antenna into an analog TV set. Then check if this TV set can receive a good TV signal. If the picture is not clear, the digital terrestrial TV broadcast signal is about the same. The difference is when the program data is not sufficient, you may see a blank screen or the video will be scrambled.

Note

Digital TV broadcast is different than normal analog TV. You will see no picture instead of noisy or blurred picture when the signal is too weak. Make sure you have a good antenna and strong digital TV signal in your location. Or you will have no TV picture at all.

Why does the remote control fail?

Verify that the  IR icon (ComproRemote) is in the system tray on the lower-right corner of the screen. If you don't have ComproRemote on the system tray, start the following program:

C:\Program Files\ Common Files\VideoMate\ComproRemoteDTV.exe

Then you should see the icon on the system tray. The IR icon should turn bright when you press buttons on the remote.

If you see no response, please move your mouse cursor on the IR icon. If you see it shows "No Device," your drivers may not be properly installed. Please remove ComproDTV 4 using "Add/Remove programs" in the Control Panel and reinstall it.

Why are images scrambled ?

Please update the video and sound card drivers from vendors' web sites. Make sure the driver for motherboard chipset is also up to date. The default drivers supplied with the Windows operating system are usually too old to operate correctly. If you still have problems, please install the latest ComproDTV 4 and driver from our website.

Contacting Compro Technical Support

If above doesn't help, please check support FAQs (Frequently Asked Questions) on our web site <http://www.comprousa.com/support>

You are welcome to download the latest software from our website as well. Most problems may be solved on the updates. When contacting Compro for technical support, please use the Compro support request form and provide as much of the requested information as possible. Please write the details in order to determine the problem. And also provide the product serial number (15 digits numbers) on the VideoMate Vista U100. Please use the form from

<http://www.comprousa.com/support/form.htm>.

We will get back to you as soon as possible.

Note

Make sure you include the information of hitting the button of "E-mail Info" in the System Device in Settings of ComproDTV in order to determine the problem.

In order to solve the problem quickly, it is very important to provide as much detail regarding the problem as possible.
